


EXR SERIES


INSTALLATION MANUAL

MODEL: EXR GT

STEP 1:

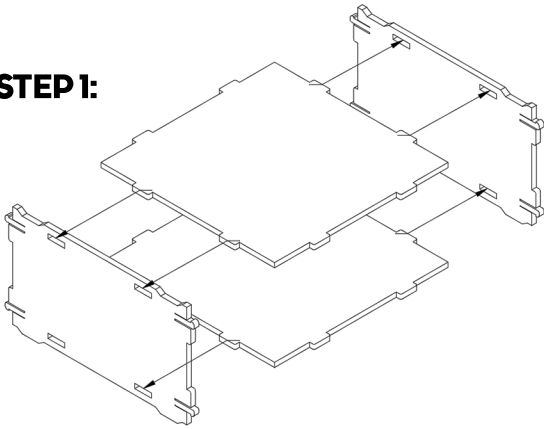


STEP 2:

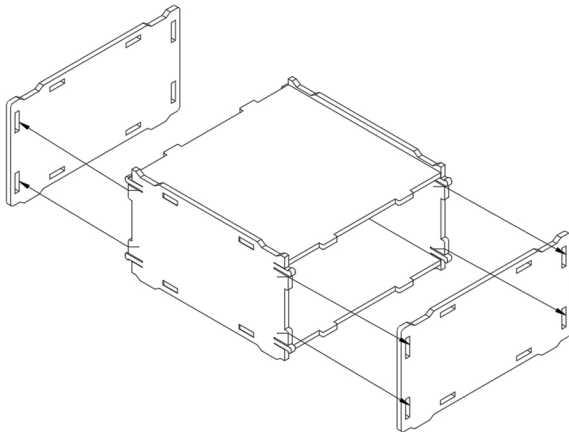


MODEL: EXR GT TALL

STEP 1:

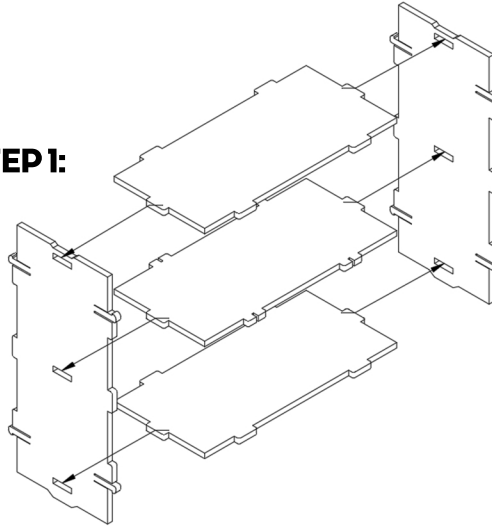


STEP 2:

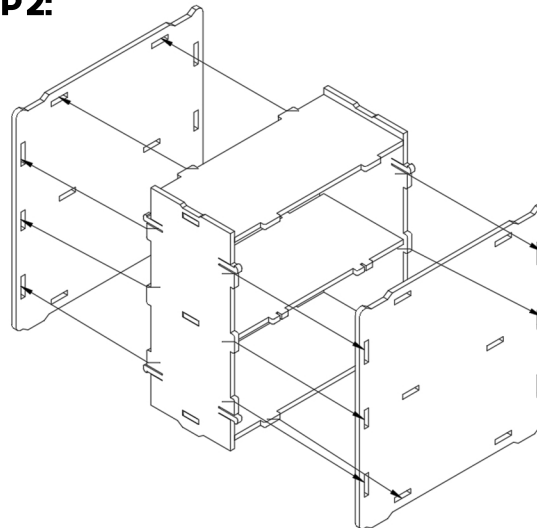

MODEL: EXR KAIDO

STEP 1:

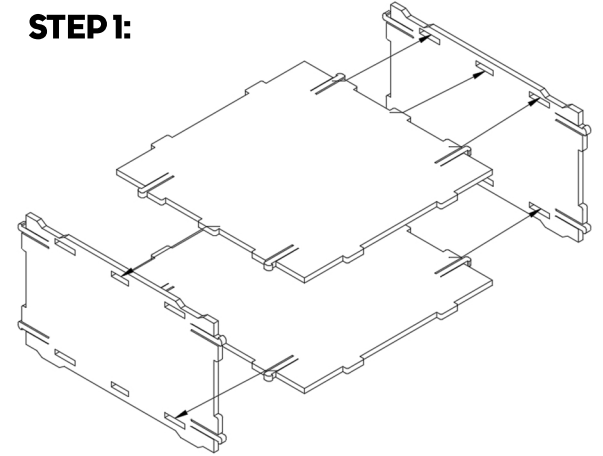

STEP 2:

