


INSTALLATION STEPS


TOTAL PANEL : 7 PCS
TOTAL BOLT : 8 PCS
TOTAL NUT : 8PCS

1

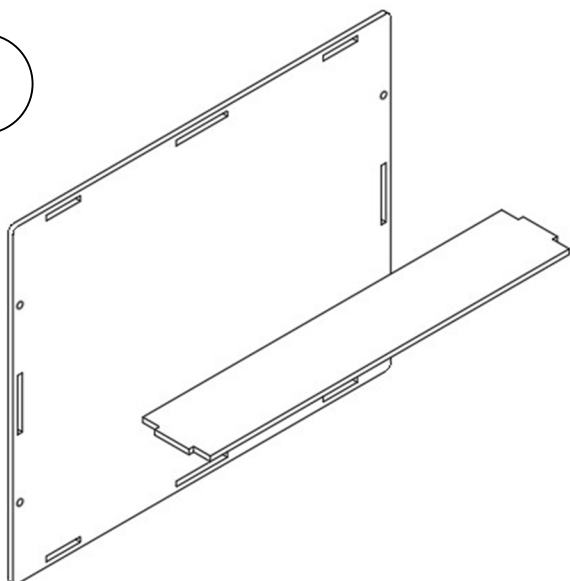


PLACE HOTWHEEL BLISTER ON THE BACK PANEL
BEFORE PROCEED TO STEP 2


4

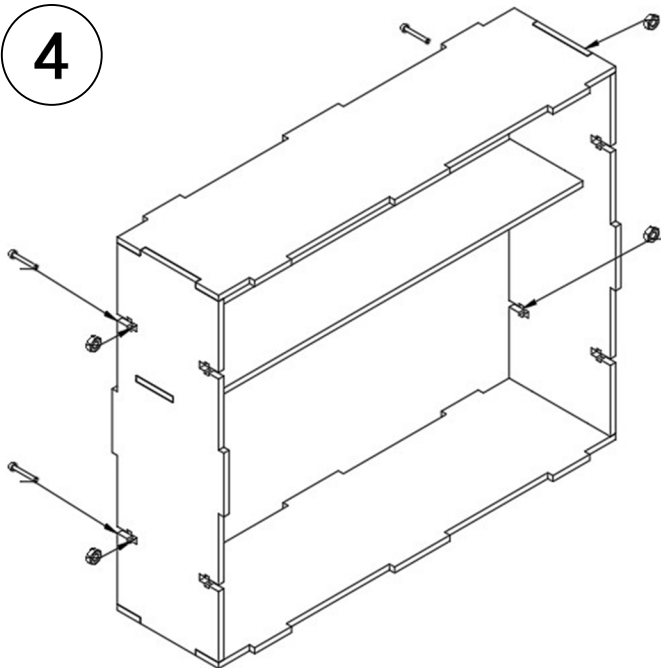

5

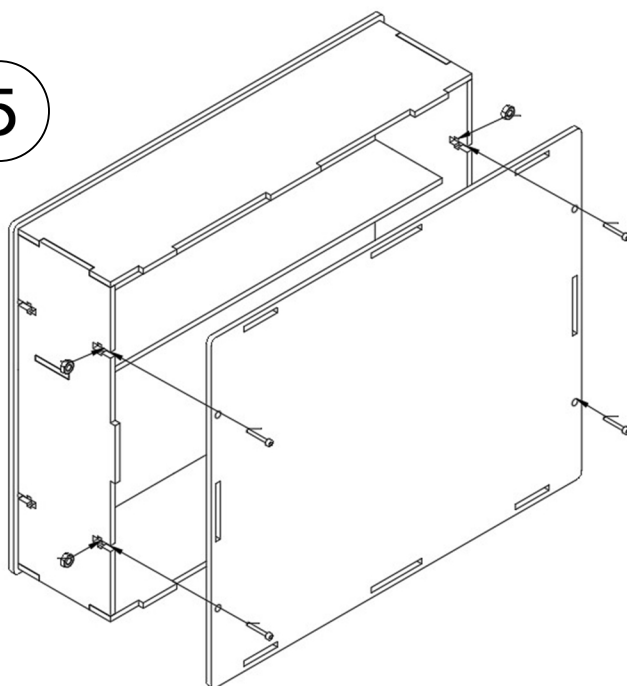

2

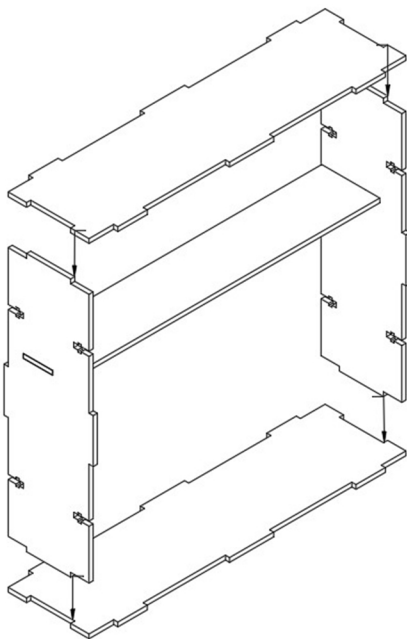

3

